

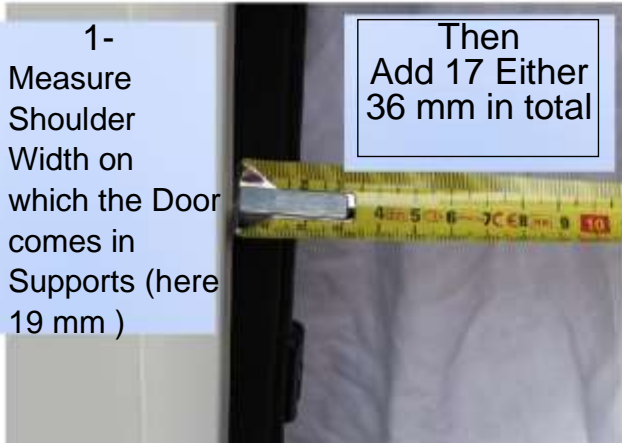


Integrated Safe Lock Mounting

ref 2210 - Version 2 Extended Bolt

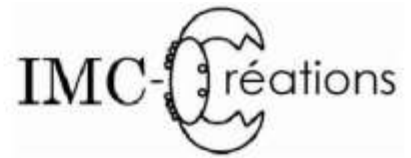


Then Add 17 Either 36 mm in total

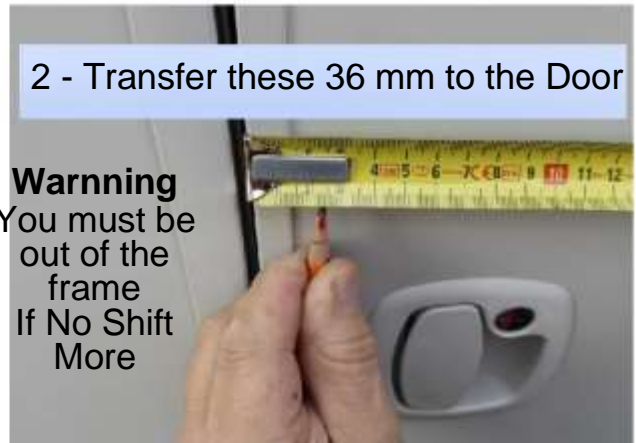

Warning
You must be out of the frame
If No Shift More


Find this Video Montage on www.imc-creations.com

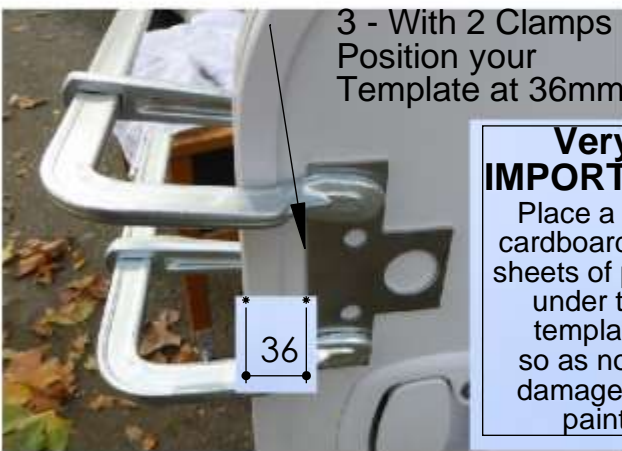

Very IMPORTANT
Place a thin cardboard or 2 sheets of paper under the template. so as not to damage the paint



4 - Drill with a Hole Saw Ø 22 mm, Centering Drill removed and Well Perpendicular Slow rotation speed

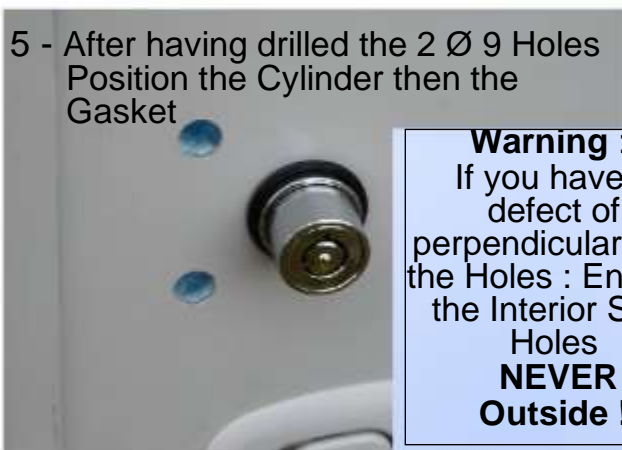

Warning :
If you have a defect of perpendicularity of the Holes : Enlarge the Interior Side Holes
NEVER Outside !




6 - Mount the 2 Gaskets and Block the 2 FHC M 8 Screws



Tip
Pre-mount with Standard Nuts to determine the Game (step 8) and then goup BrakeNuts

Warning to Seal Ø 22!

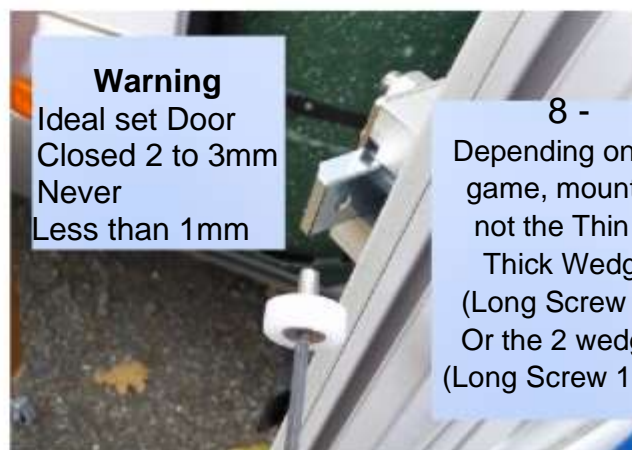

Warning
Ideal set Door Closed 2 to 3mm
Never Less than 1mm

8 - Depending on the game, mount or not the Thin or Thick Wedge (Long Screw 12) Or the 2 wedges (Long Screw 16)

Black Version : IMC Créations guarantees only the uniformity of the black anodizing from the factory, no support will be made once the lock is mounted on the vehicle.

In case of Difficult Slider Operation: Oil the Slides with 3 in 1 Fine Grain Oil.